


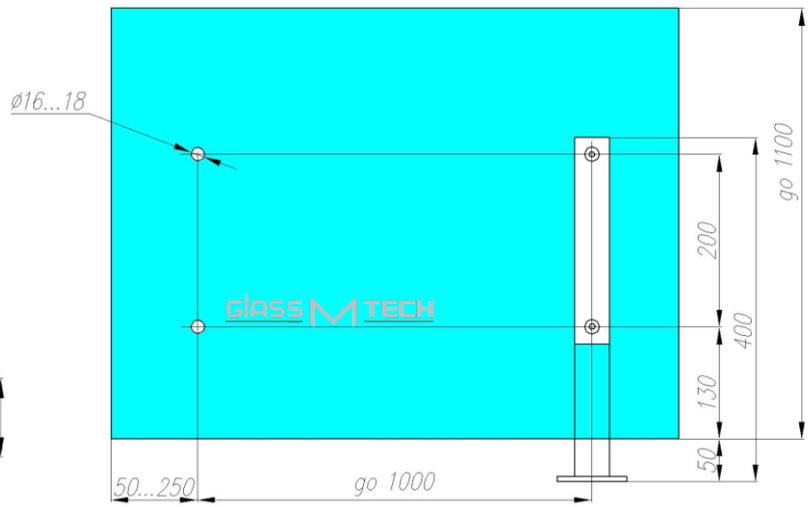


Інструкція МОНТАЖУ СТІЙОК


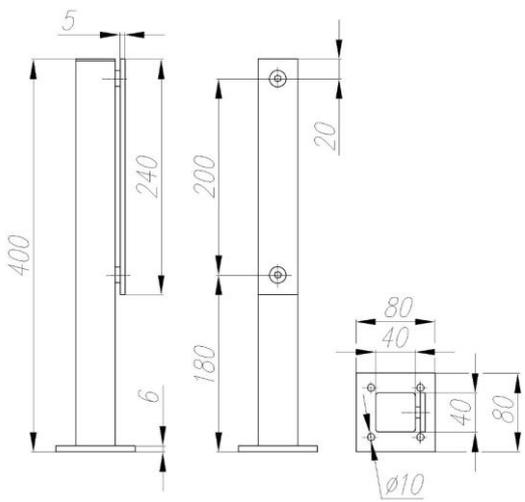


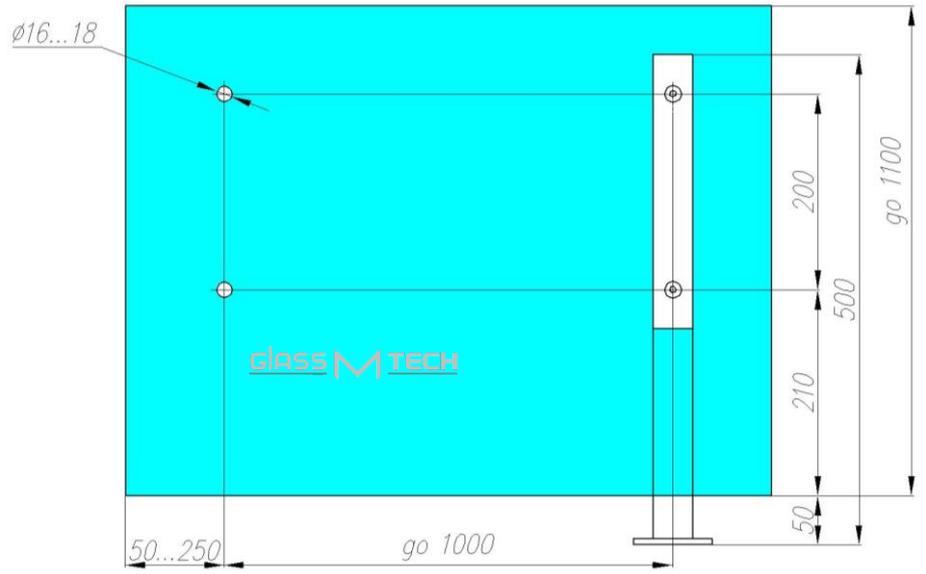



G500-01

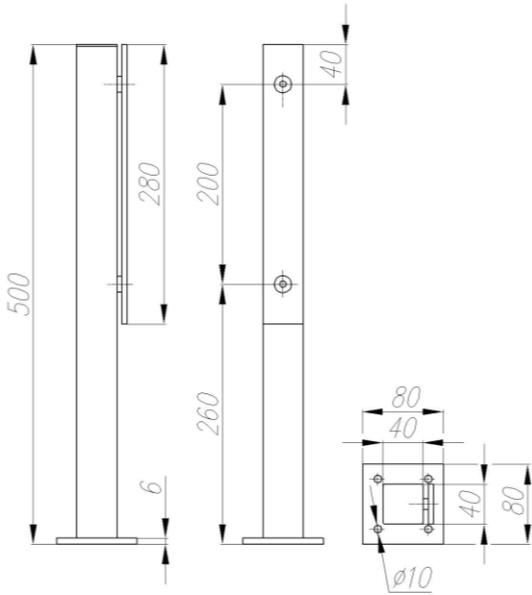



G600-01

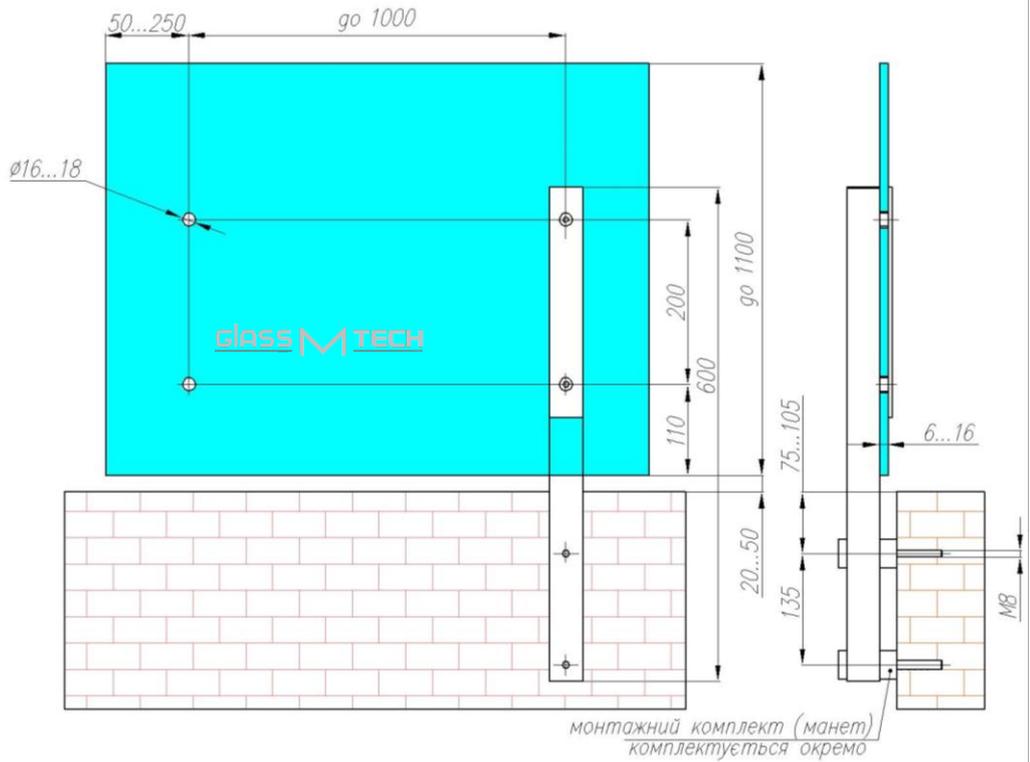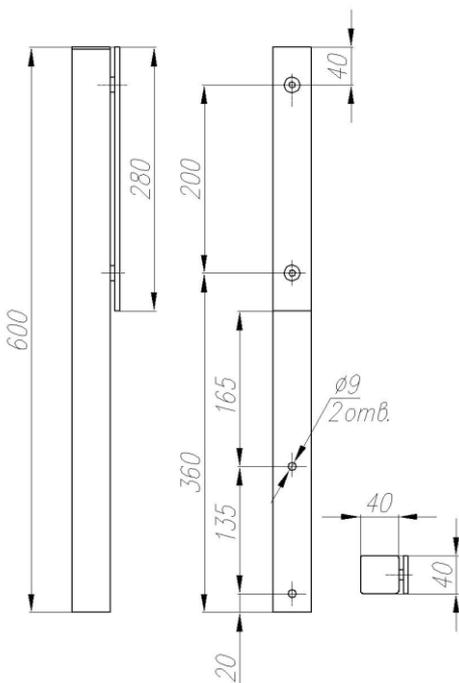



монтажный комплект (манет)
комплектруется окремо

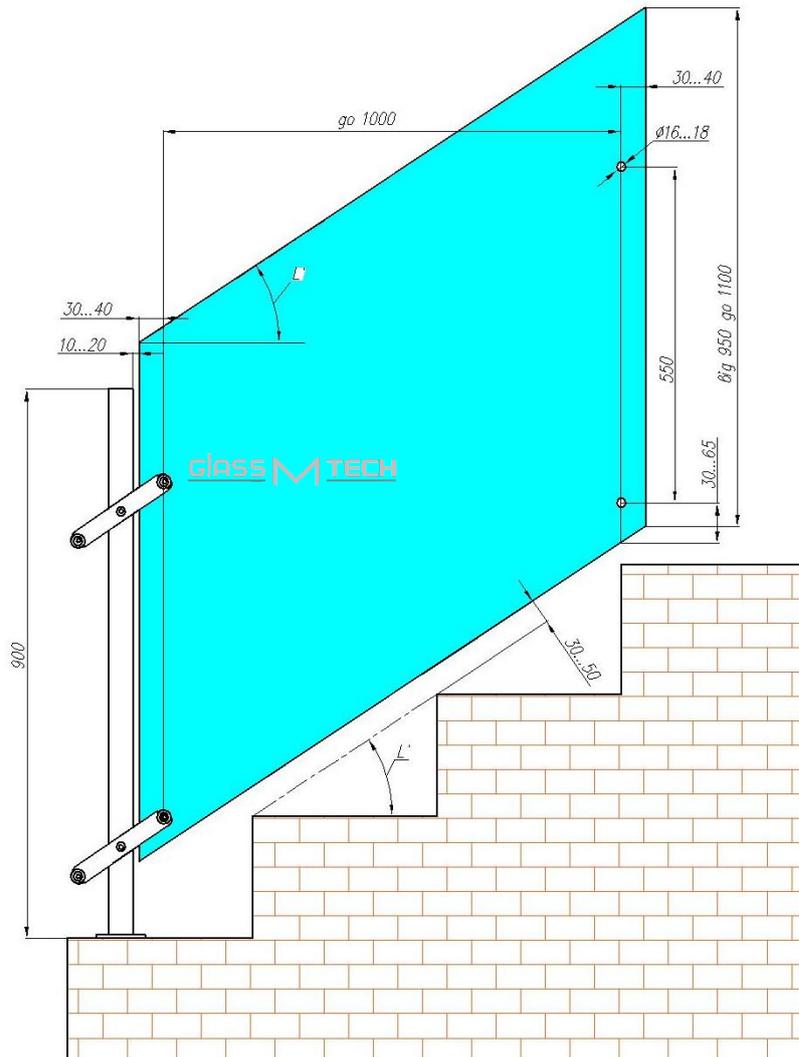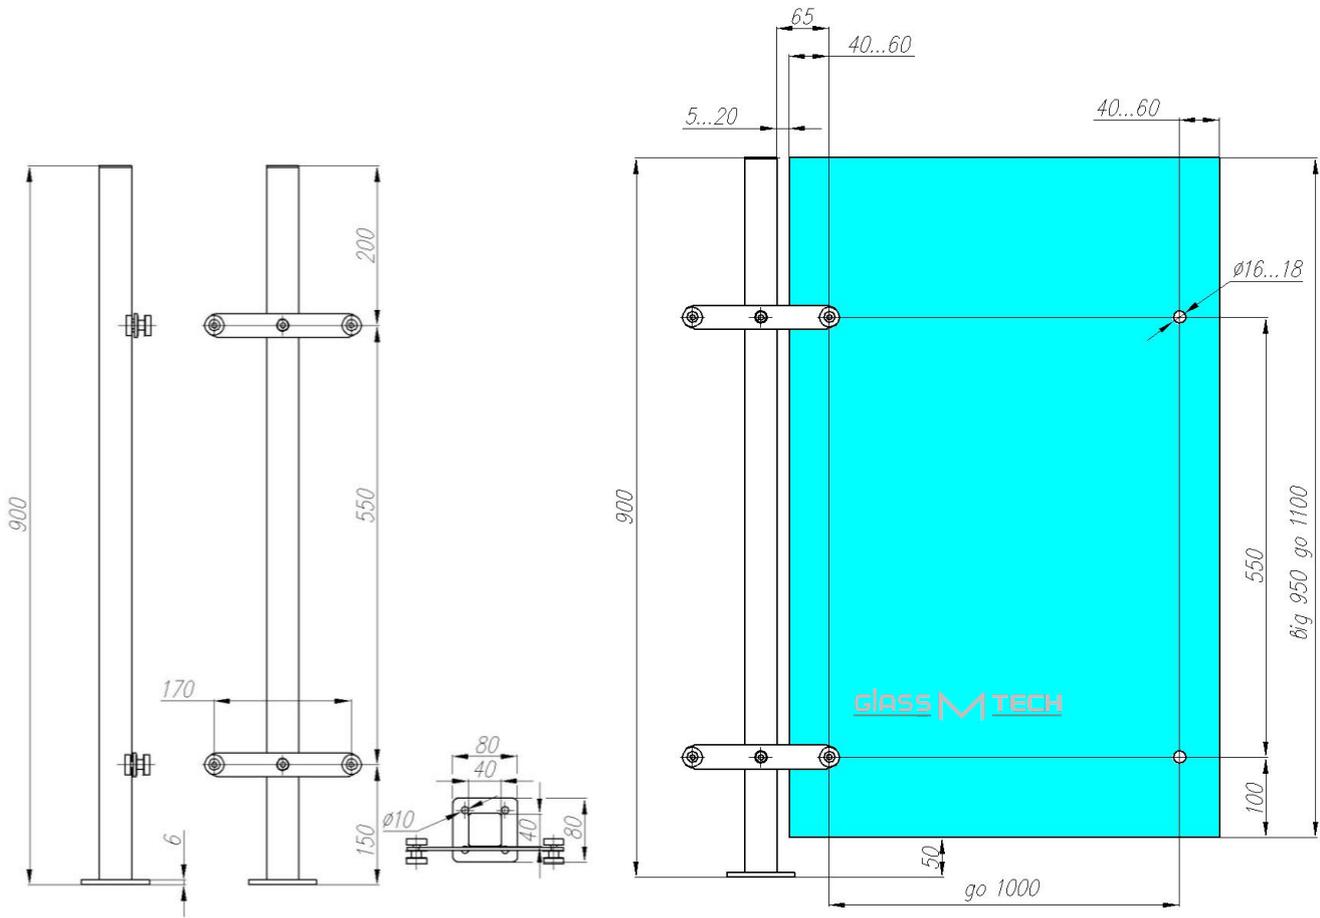



G900-02

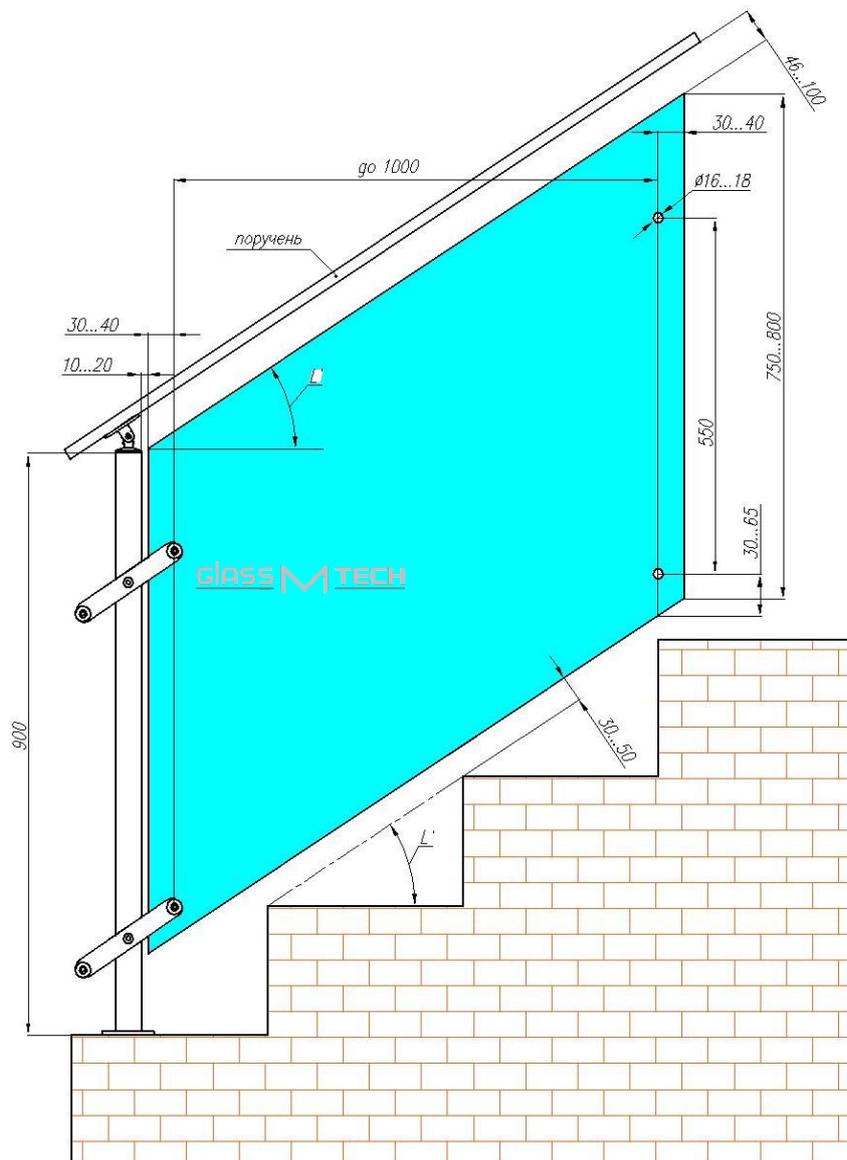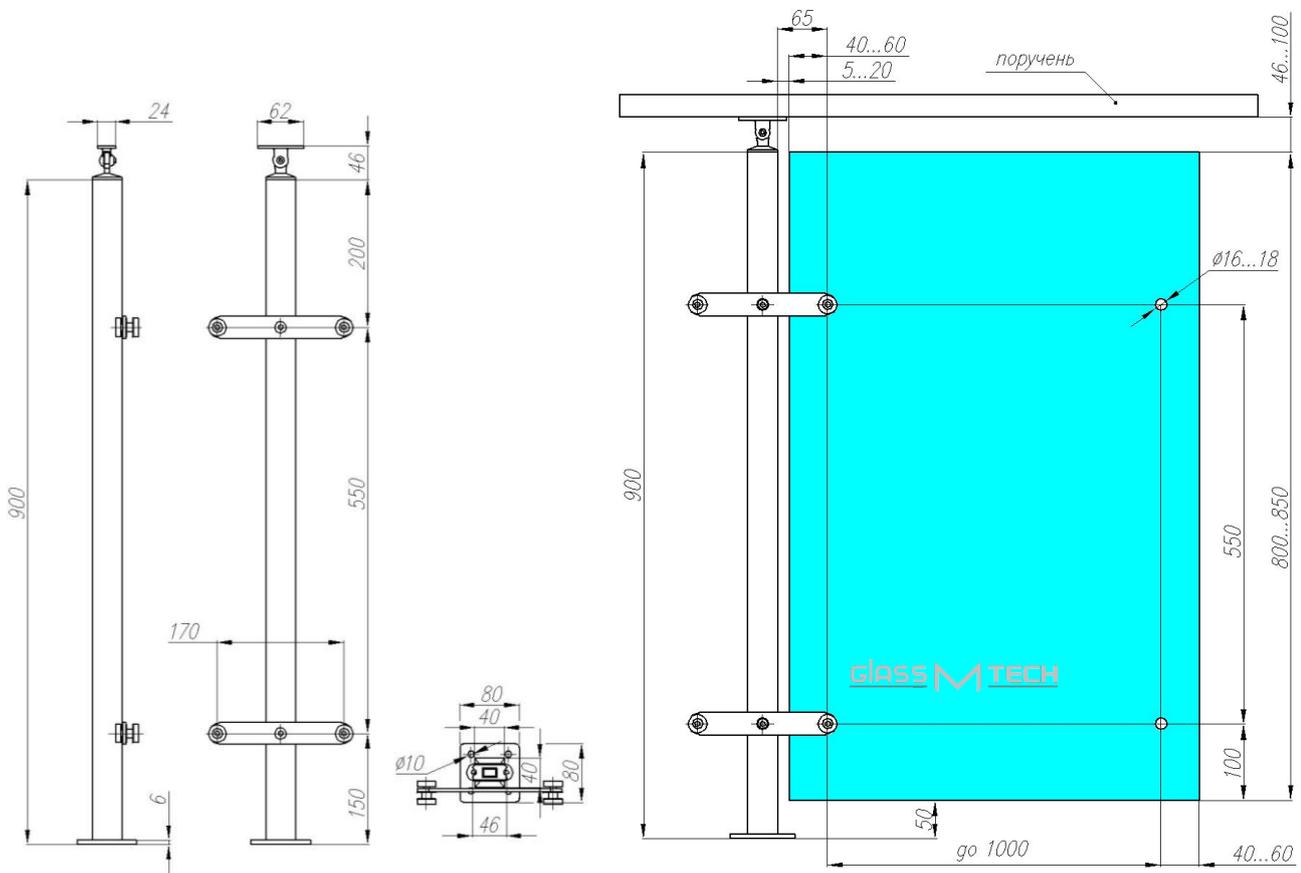



G800-02

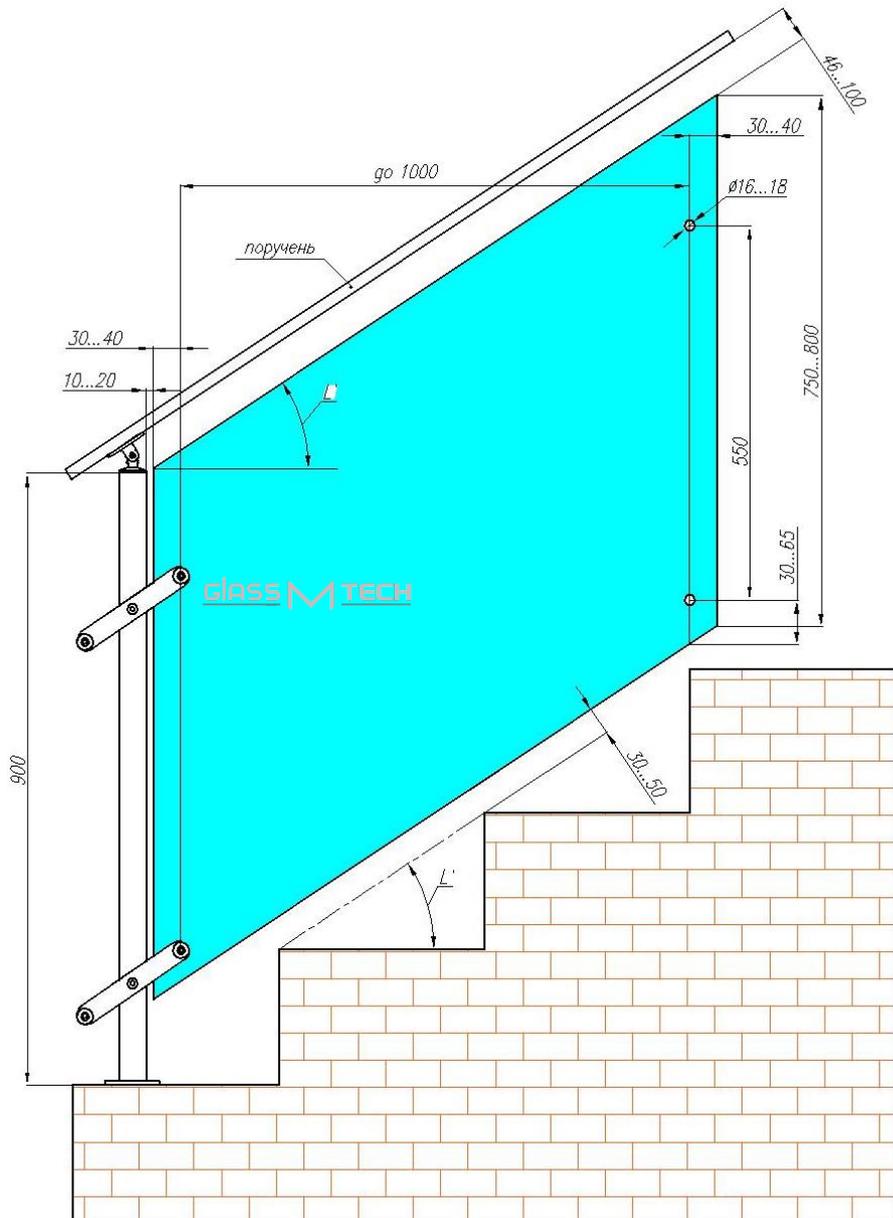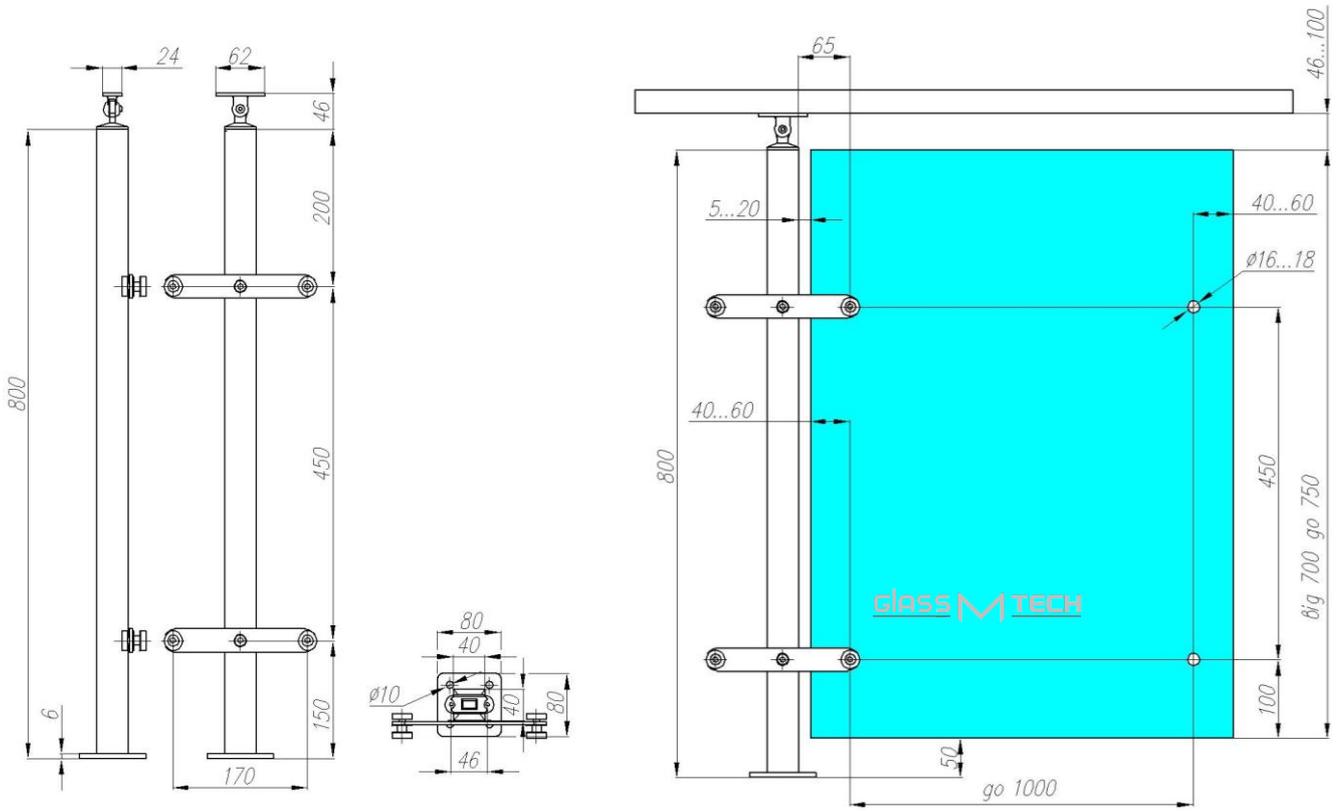



G250-02

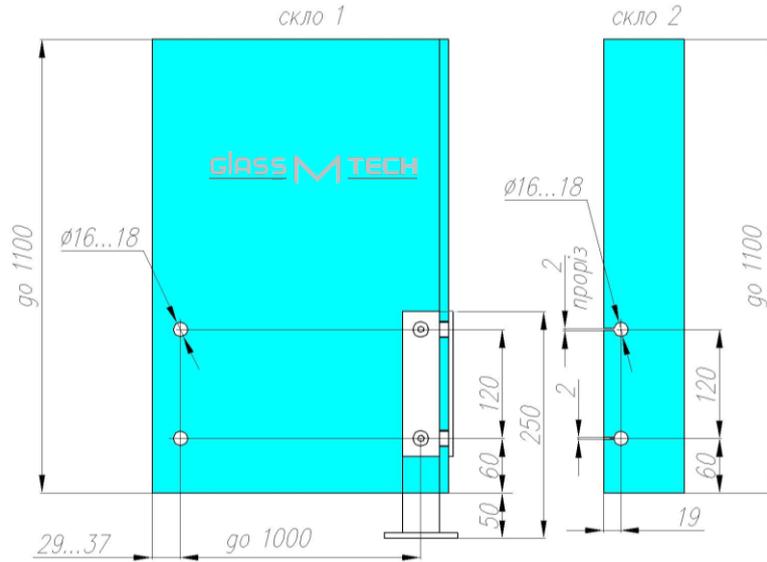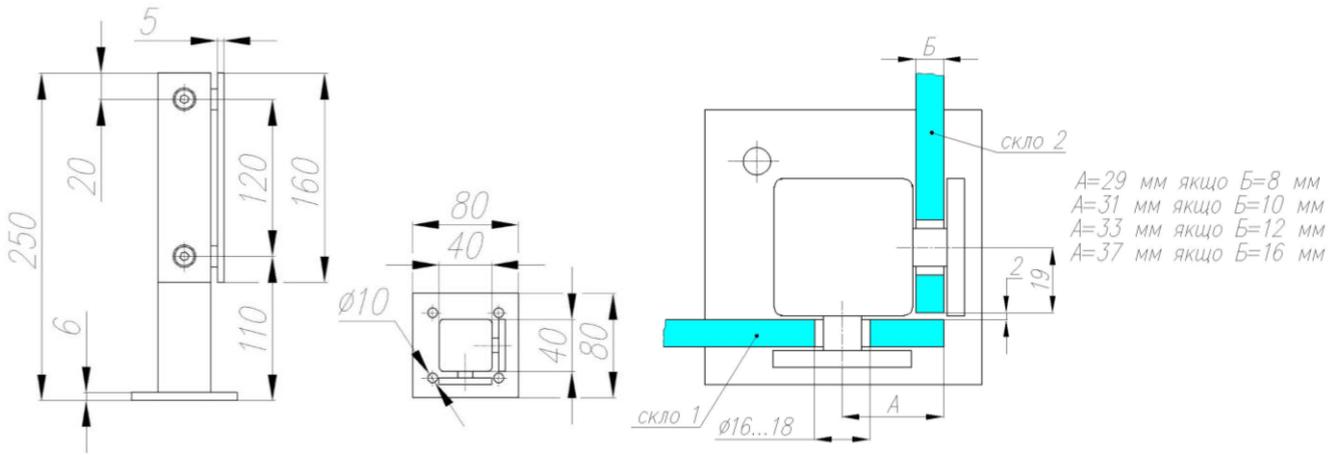



G300-02

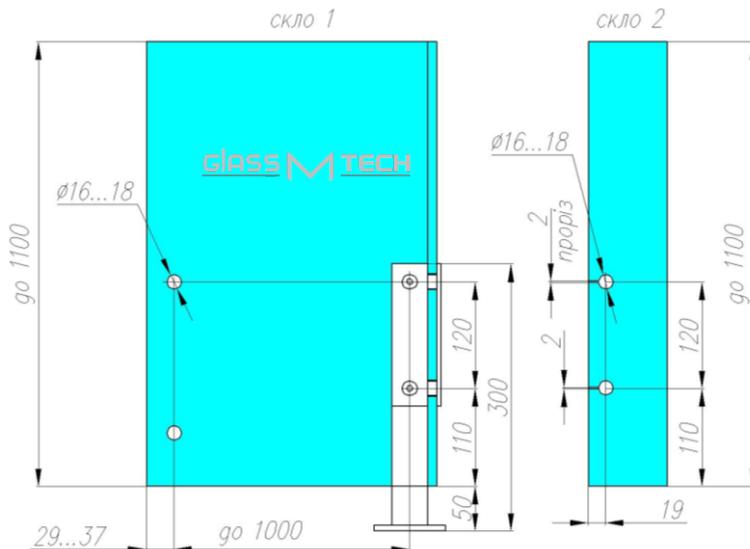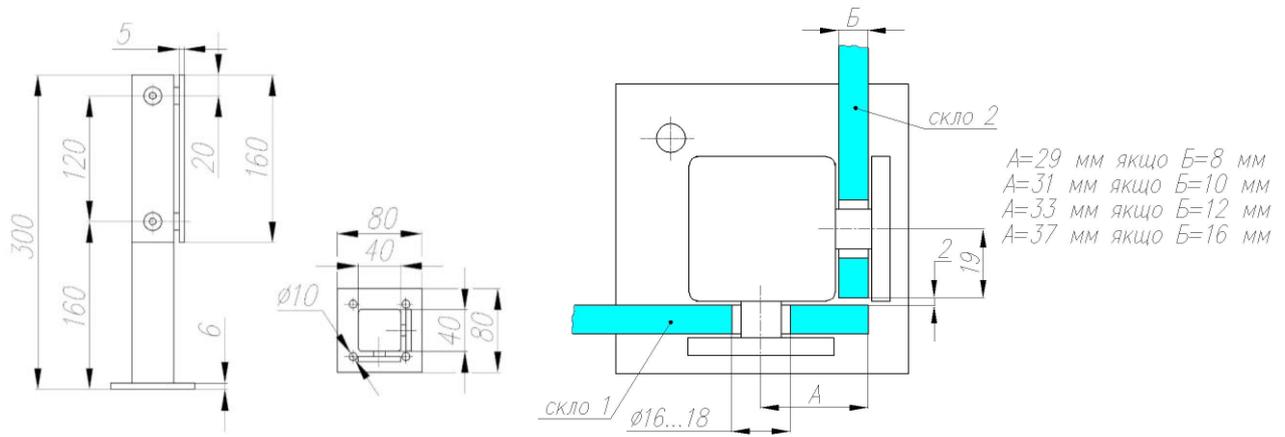


G350-02

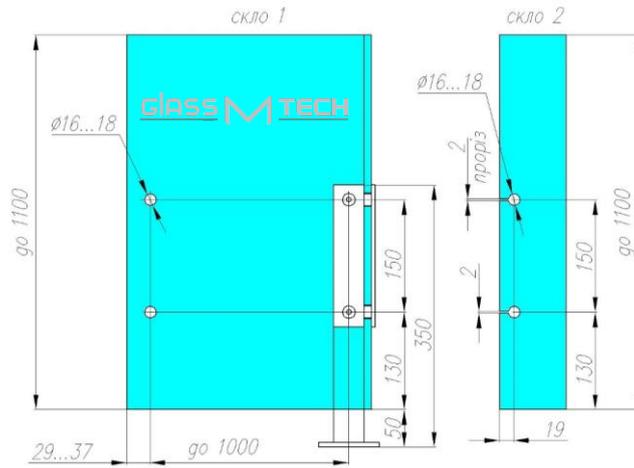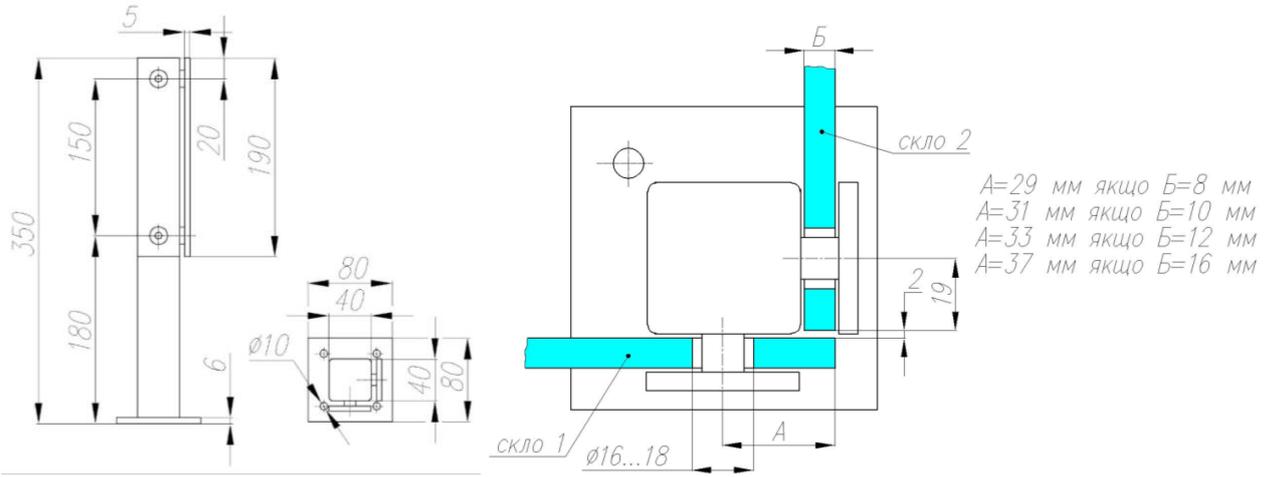


G400-02

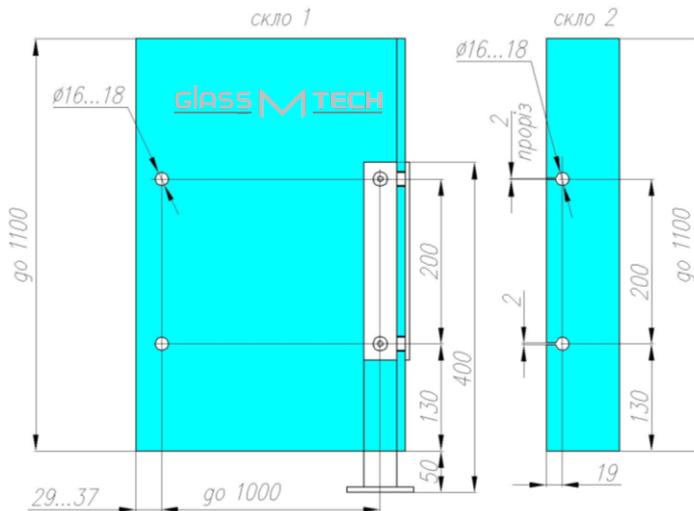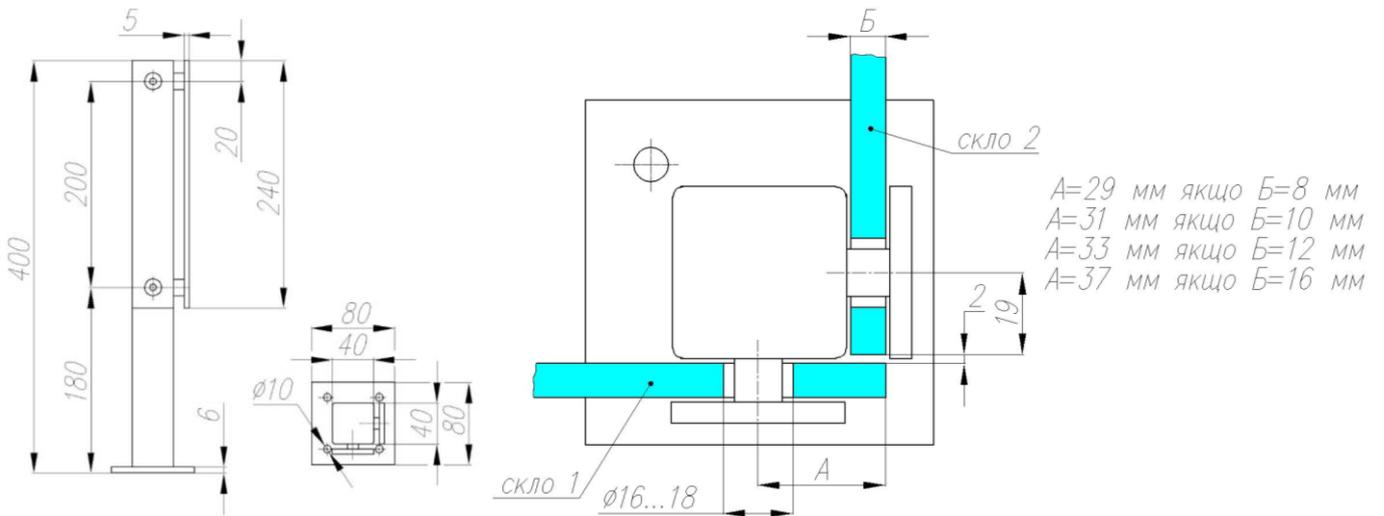


G250-03

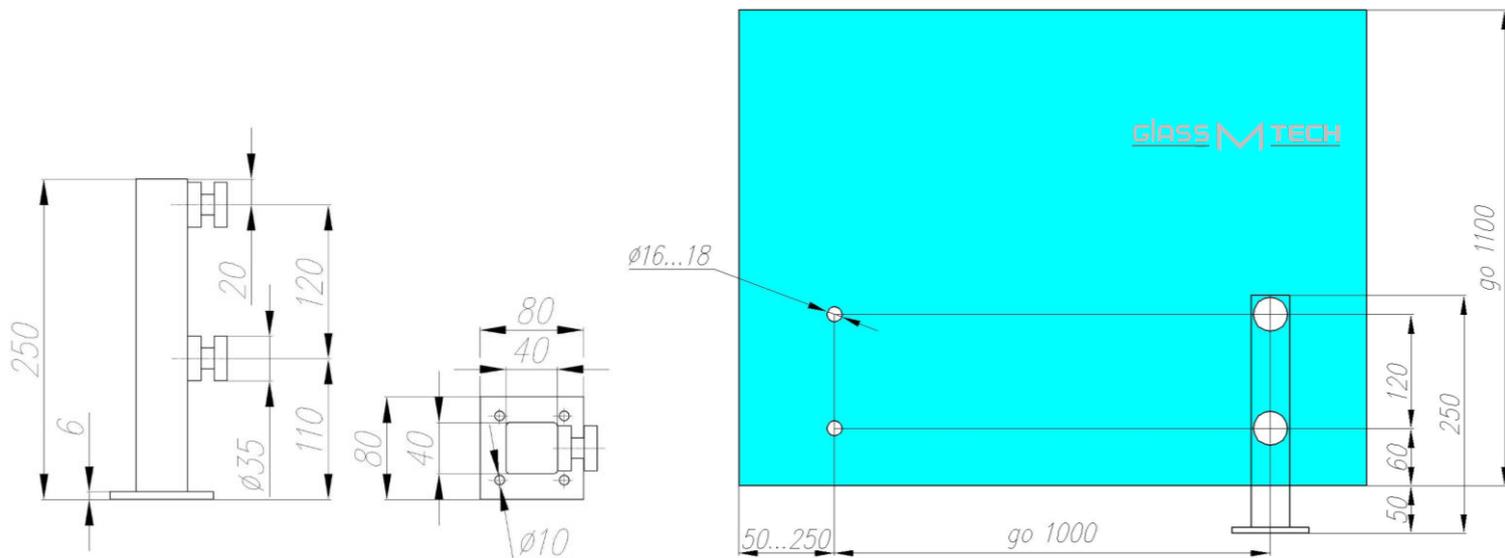


G300-03

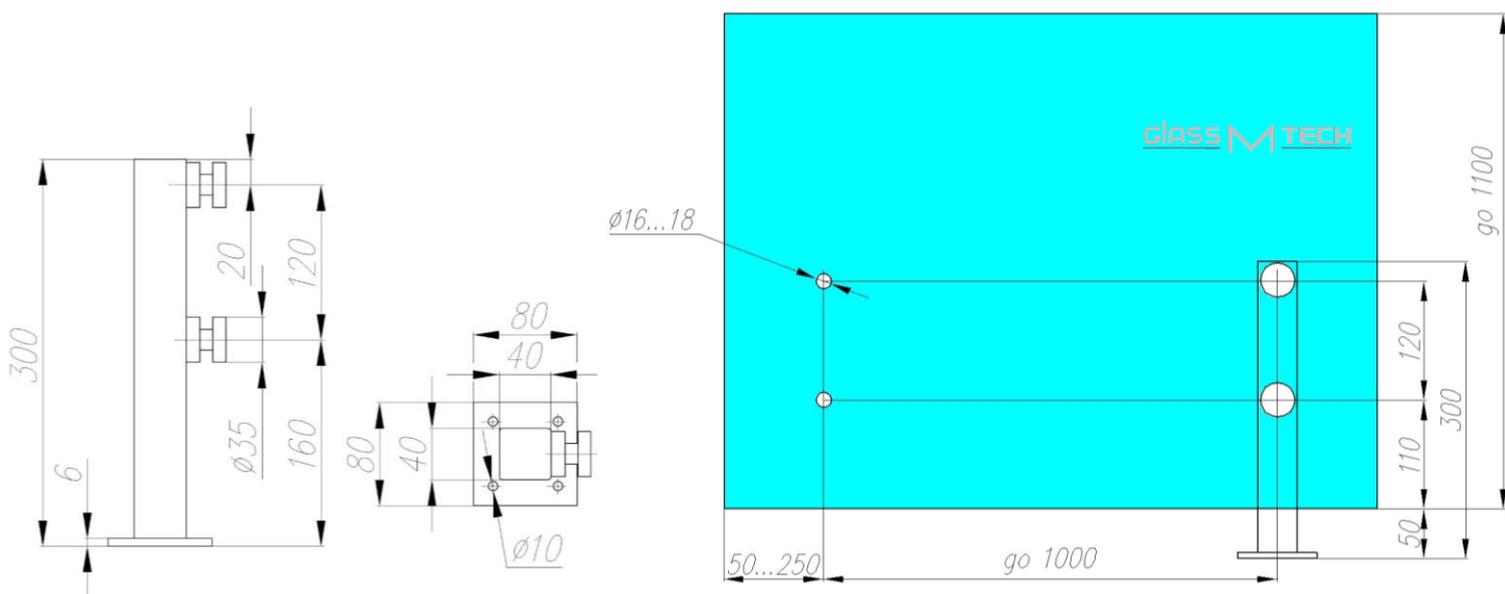


G350-03

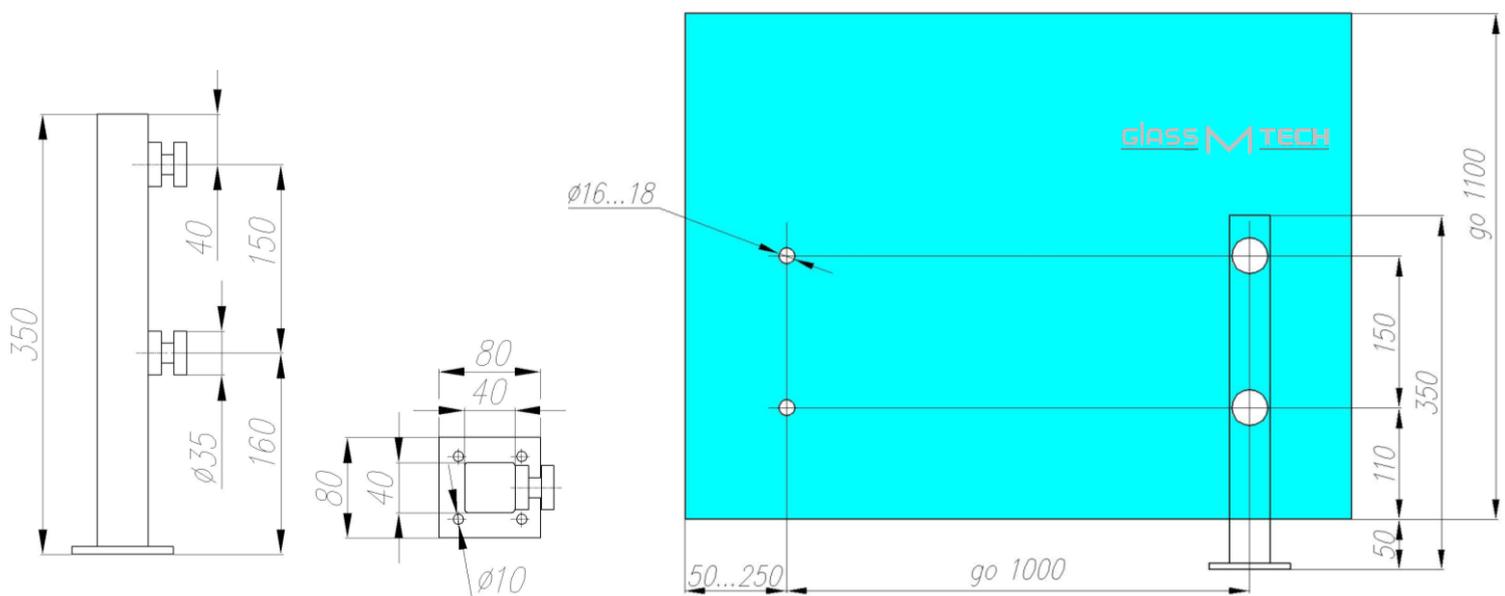


G400-03

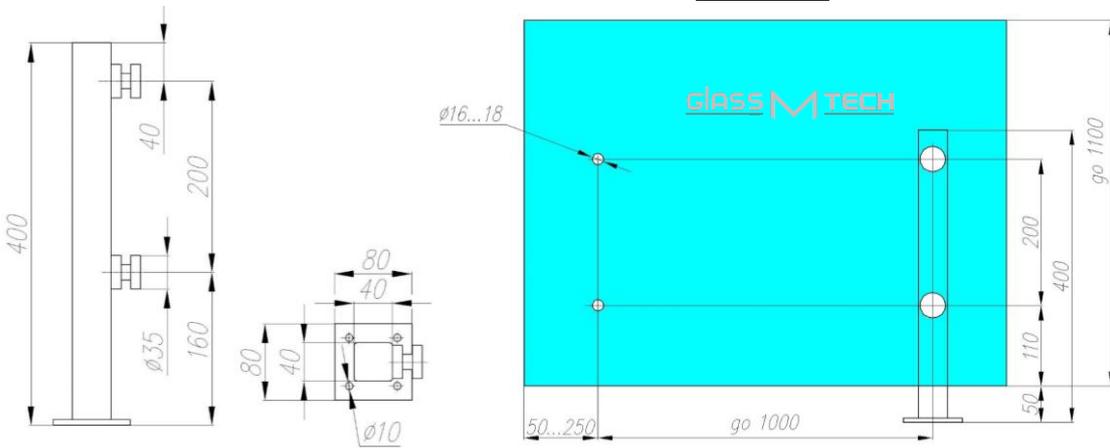


G500-03

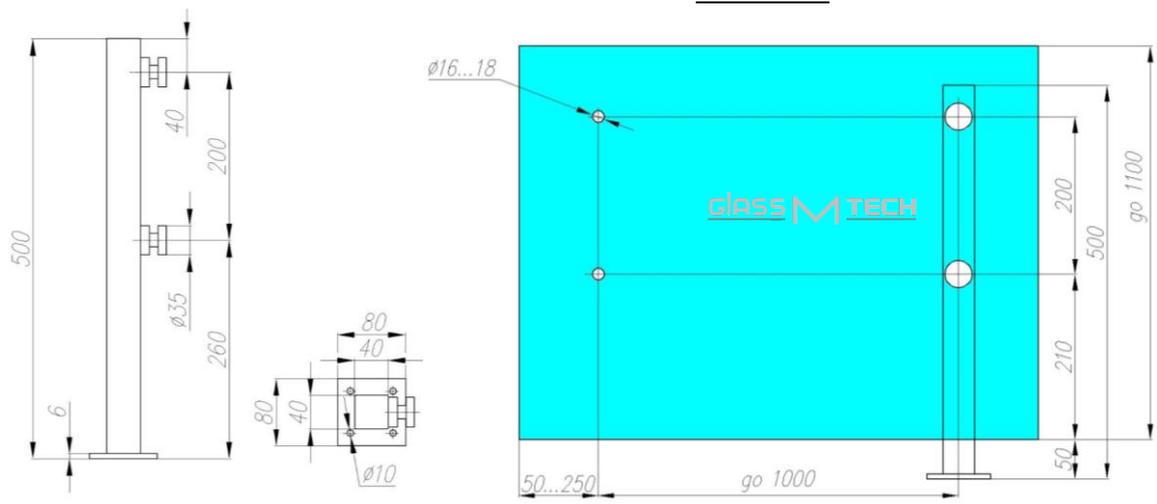



G250-04

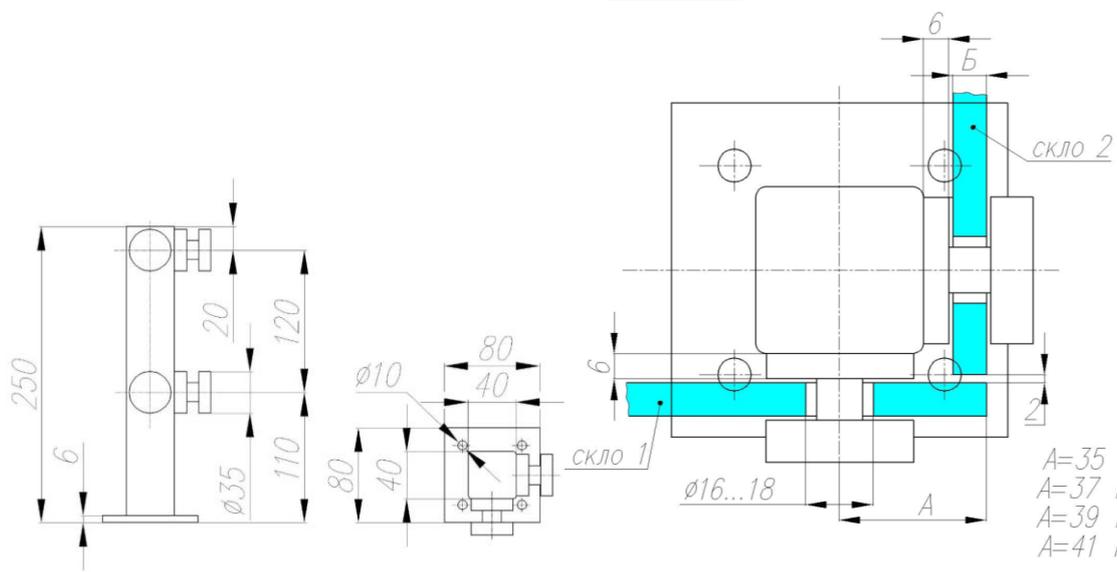


- A=35 мм якщо B=8 мм
- A=37 мм якщо B=10 мм
- A=39 мм якщо B=12 мм
- A=41 мм якщо B=16 мм

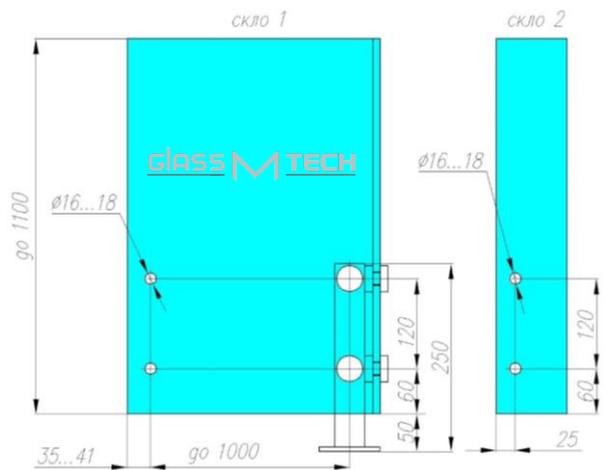


G300-04

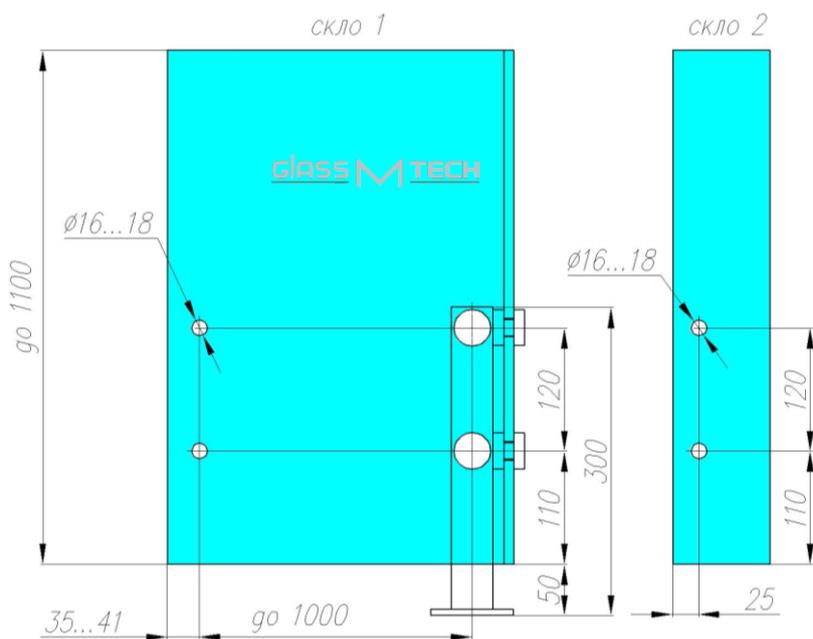
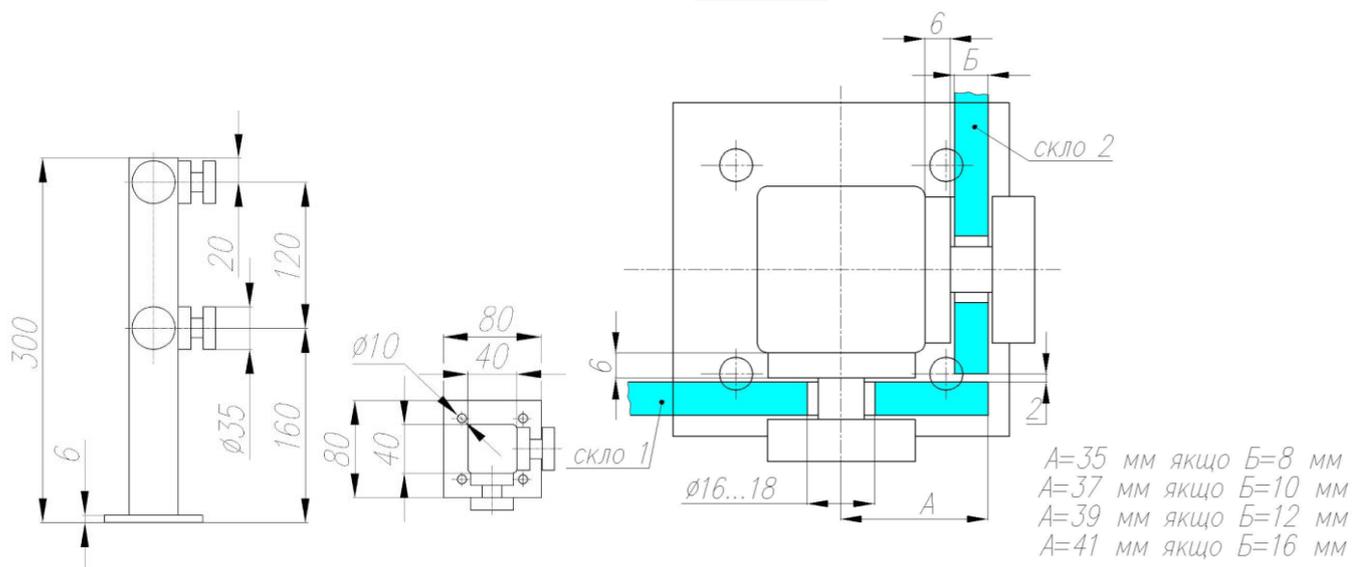


G350-04


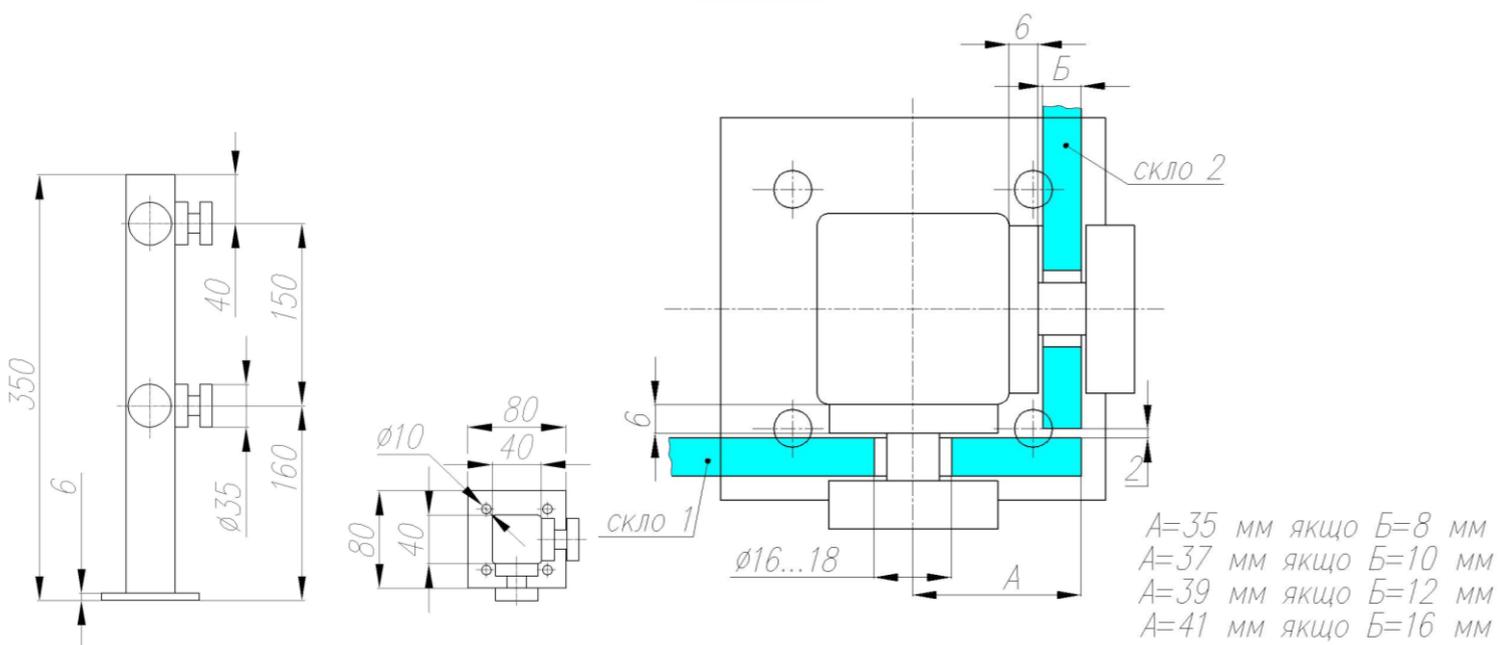


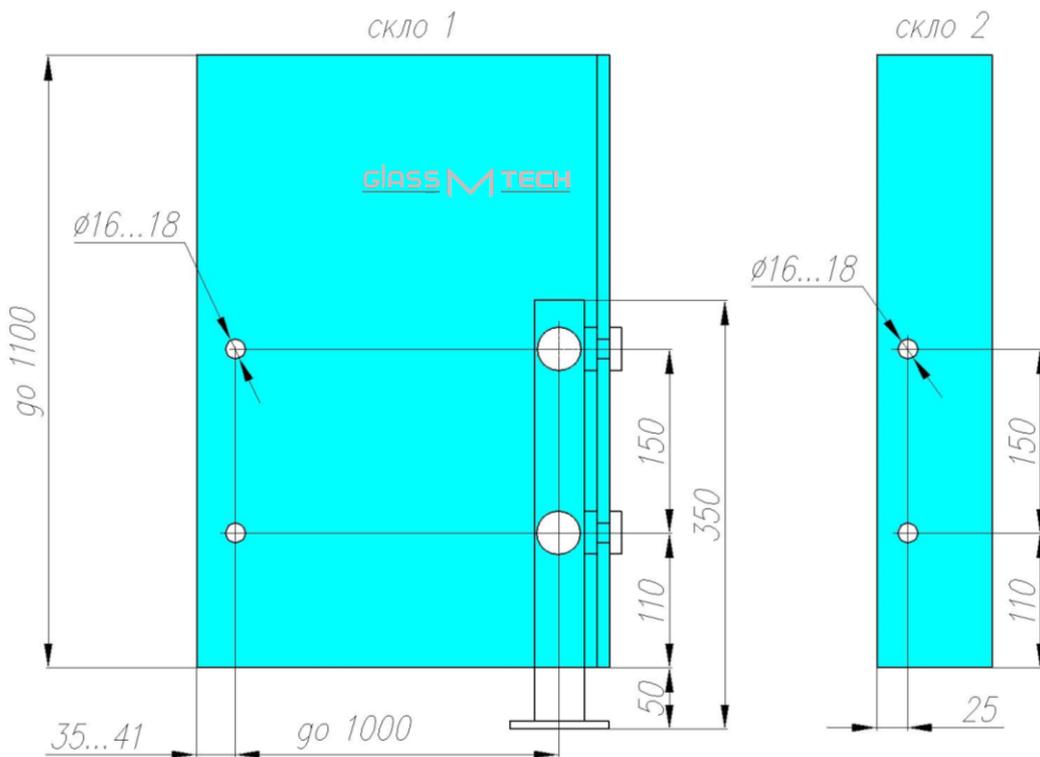


G400-04

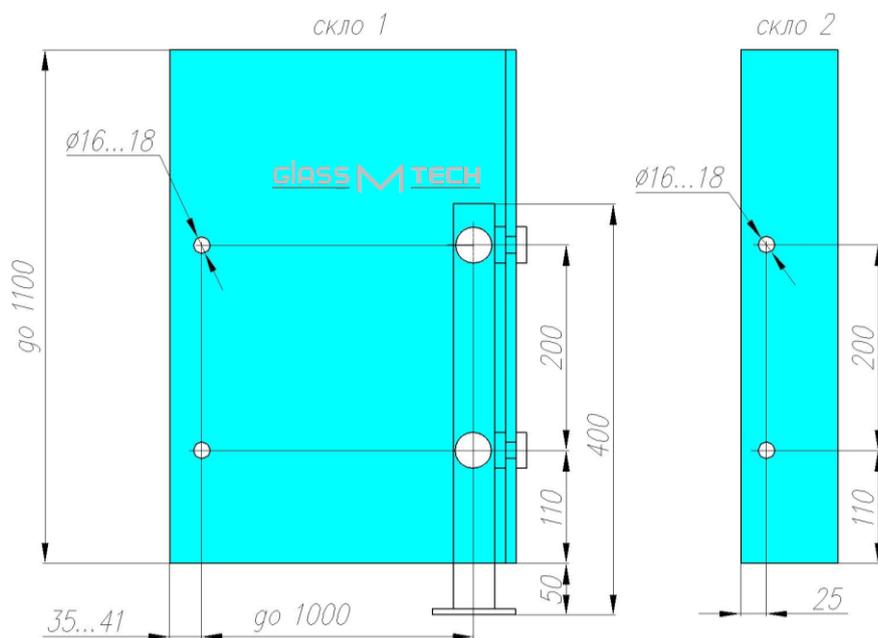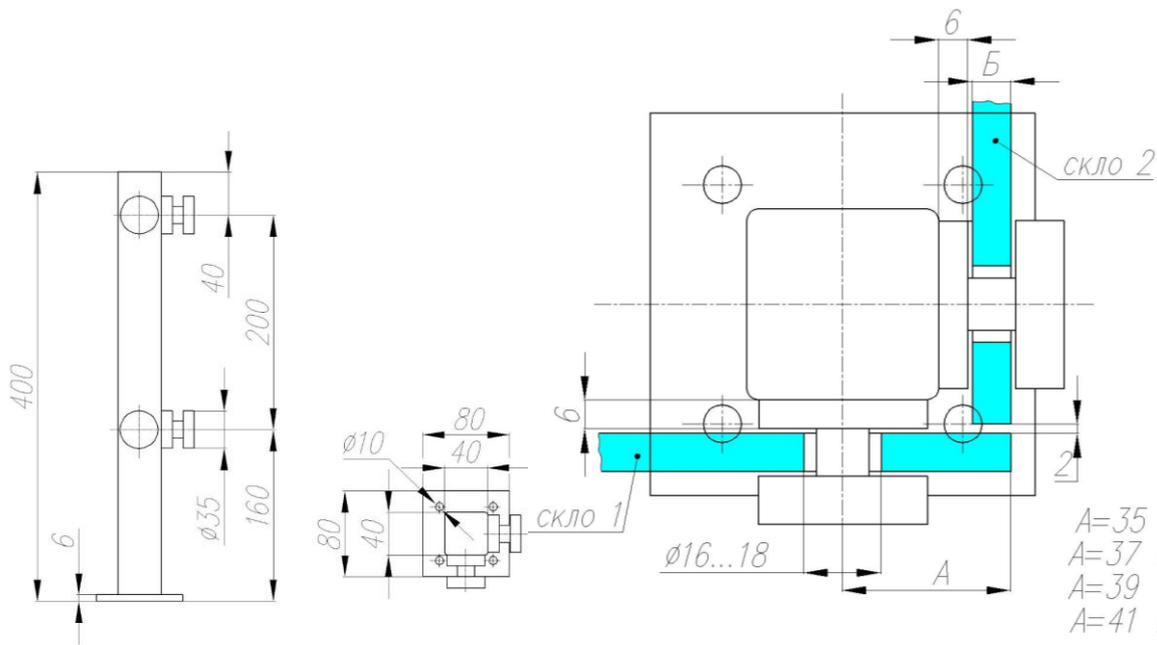


G500-04

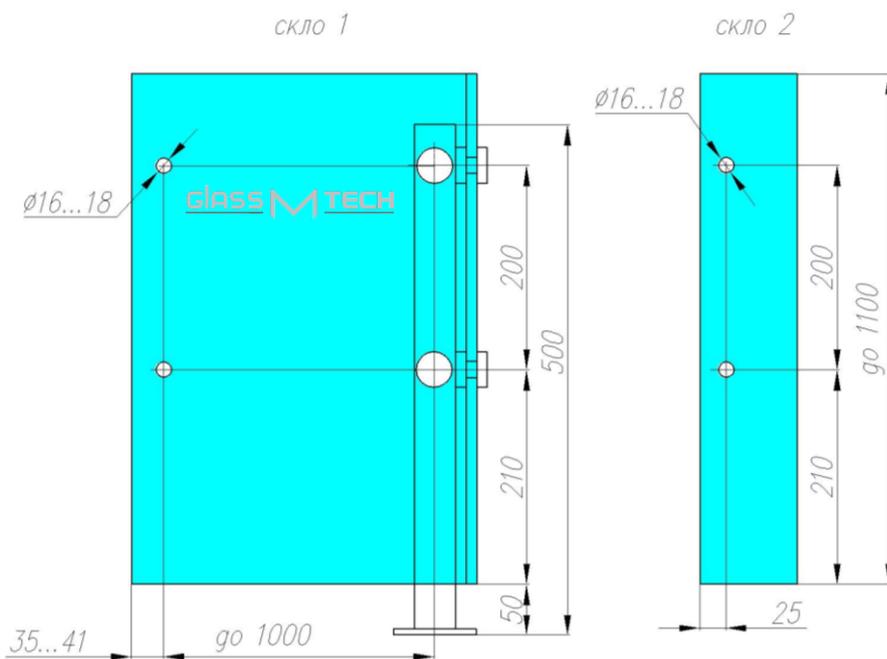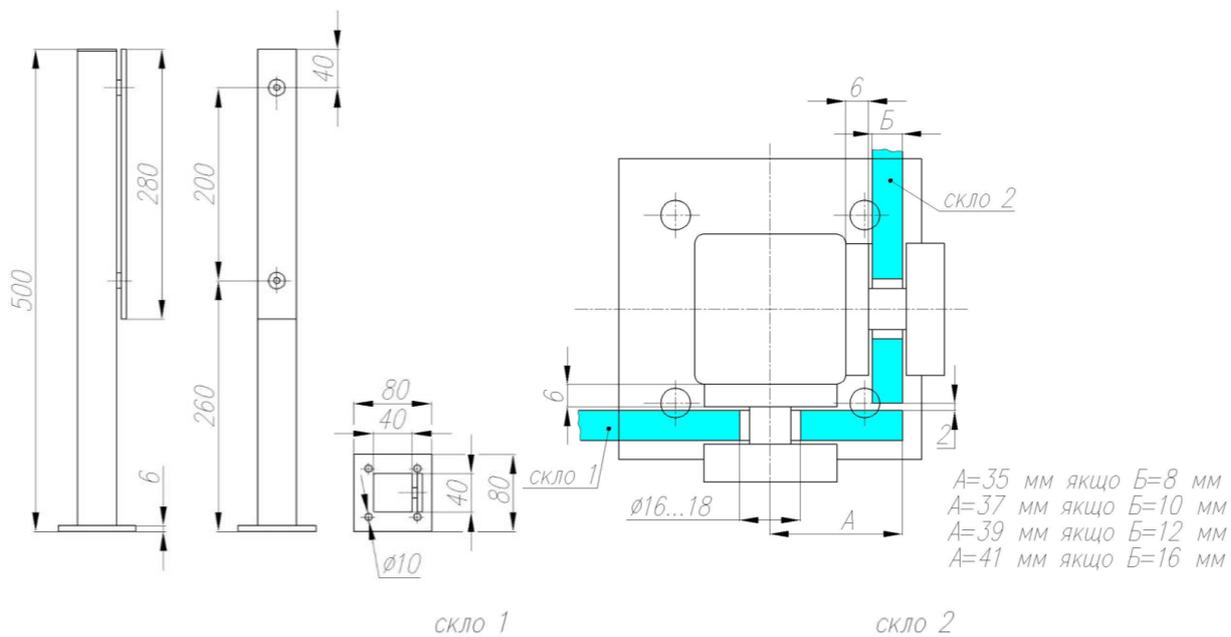


G900-03

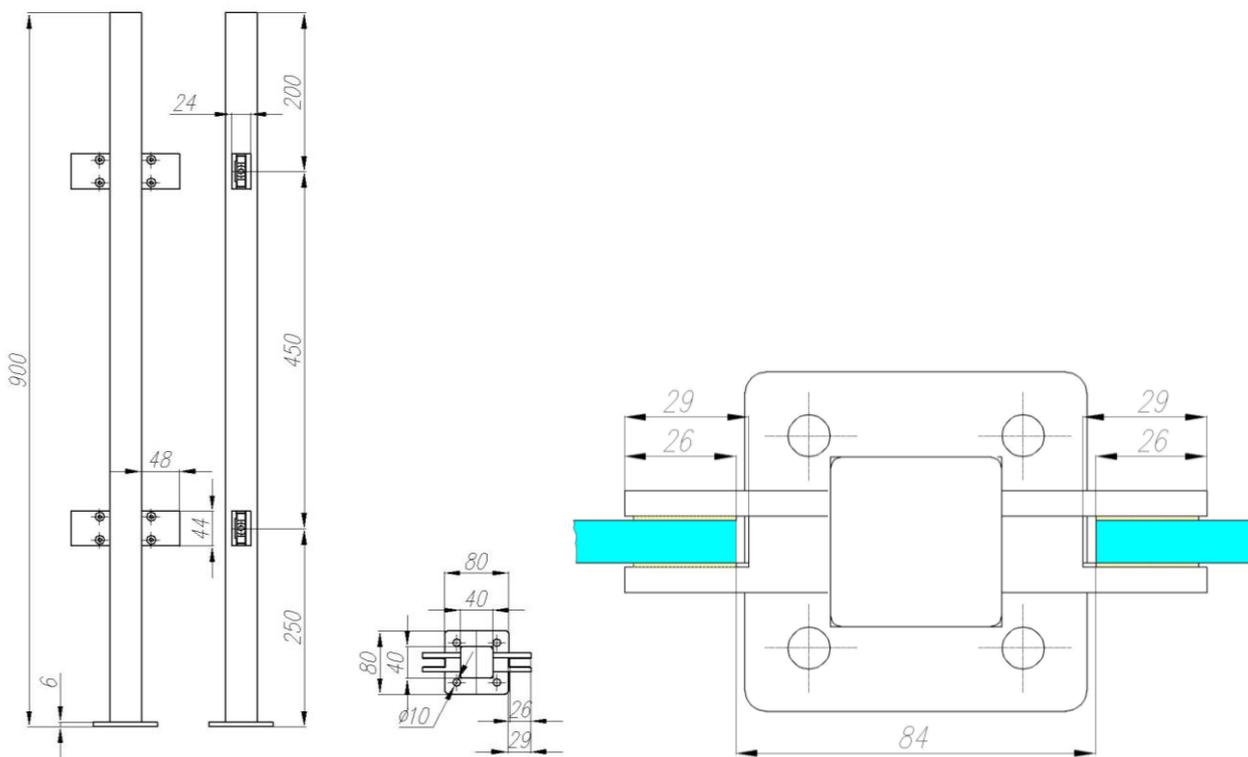



GLASS M TECH

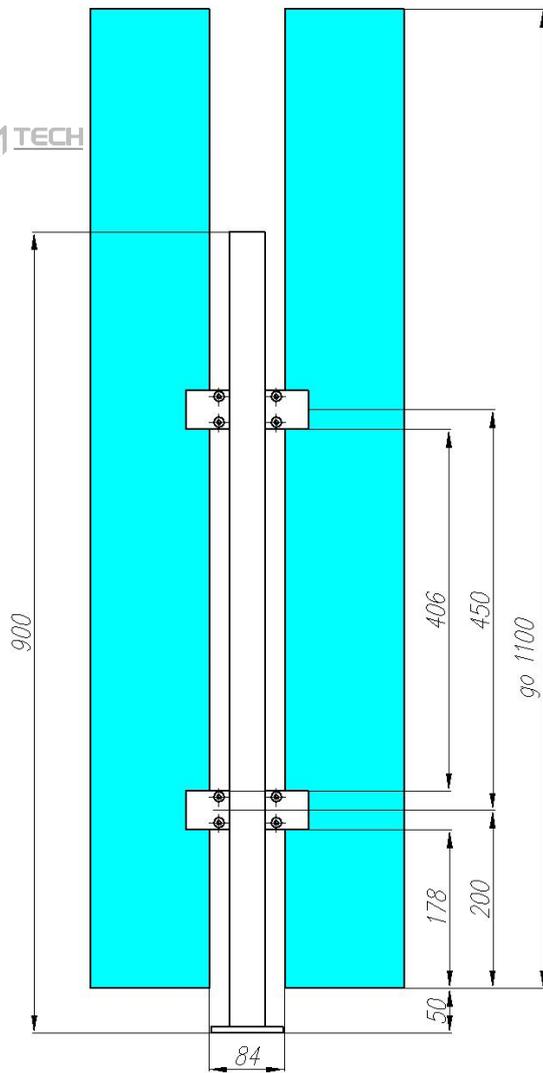


G900-04

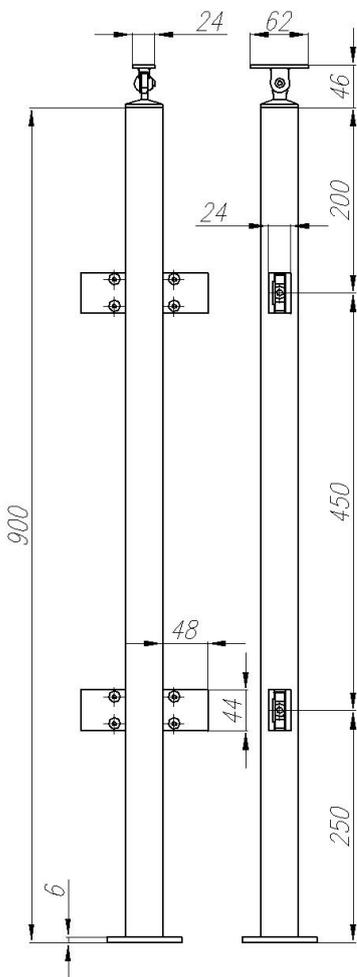


GLASS M TECH

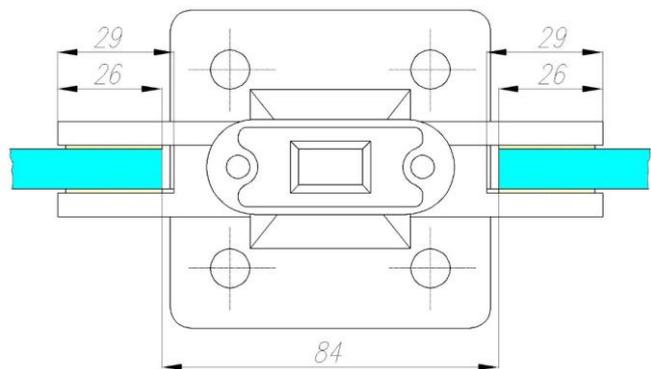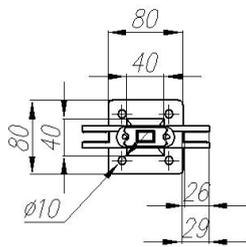


G900-06

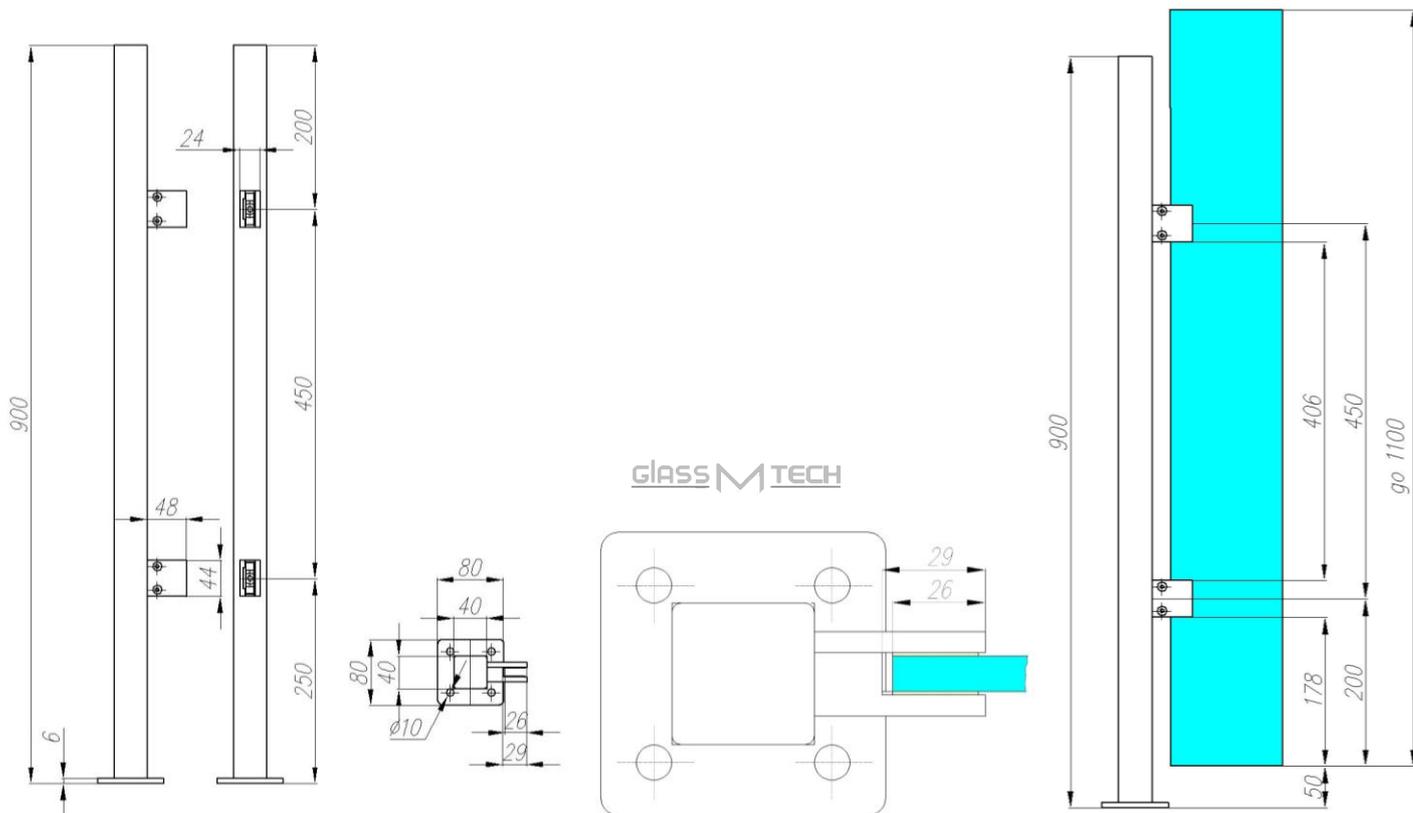


G900-07

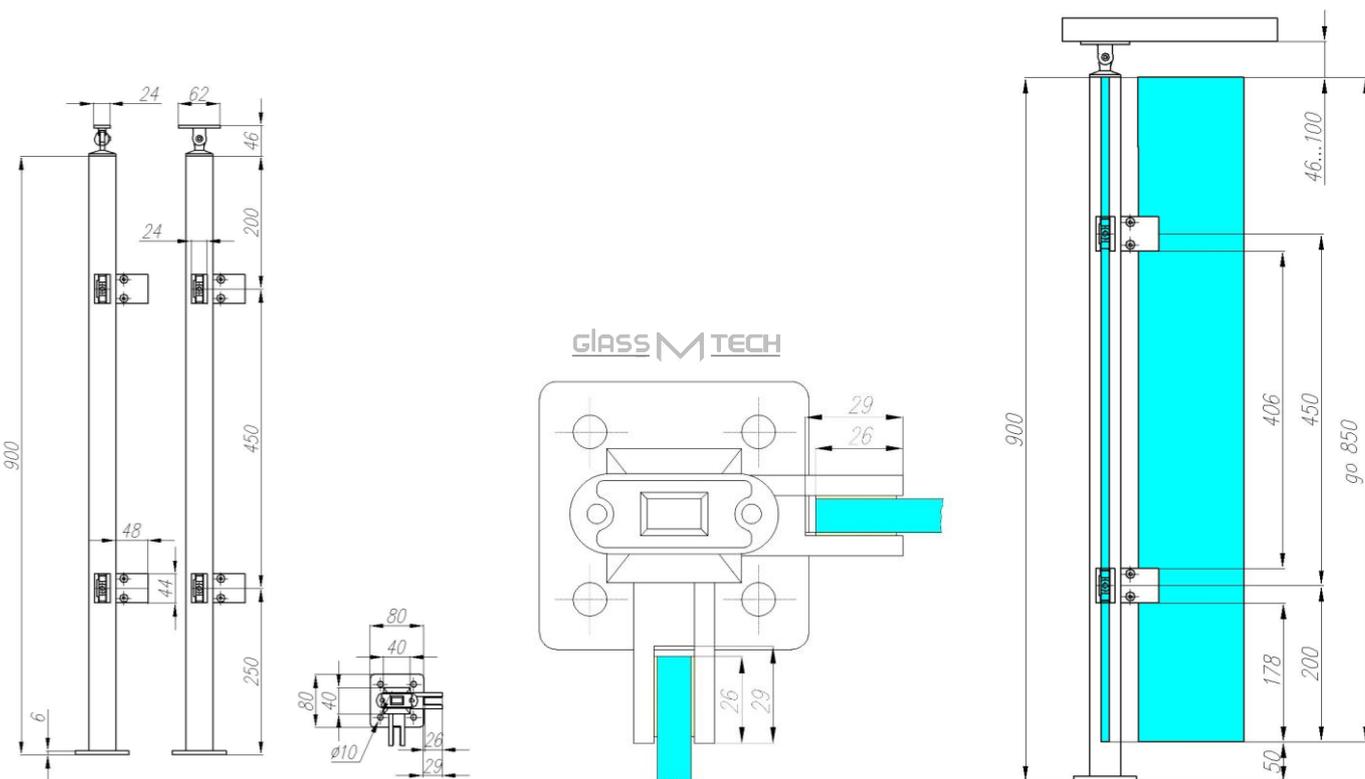


G900-08

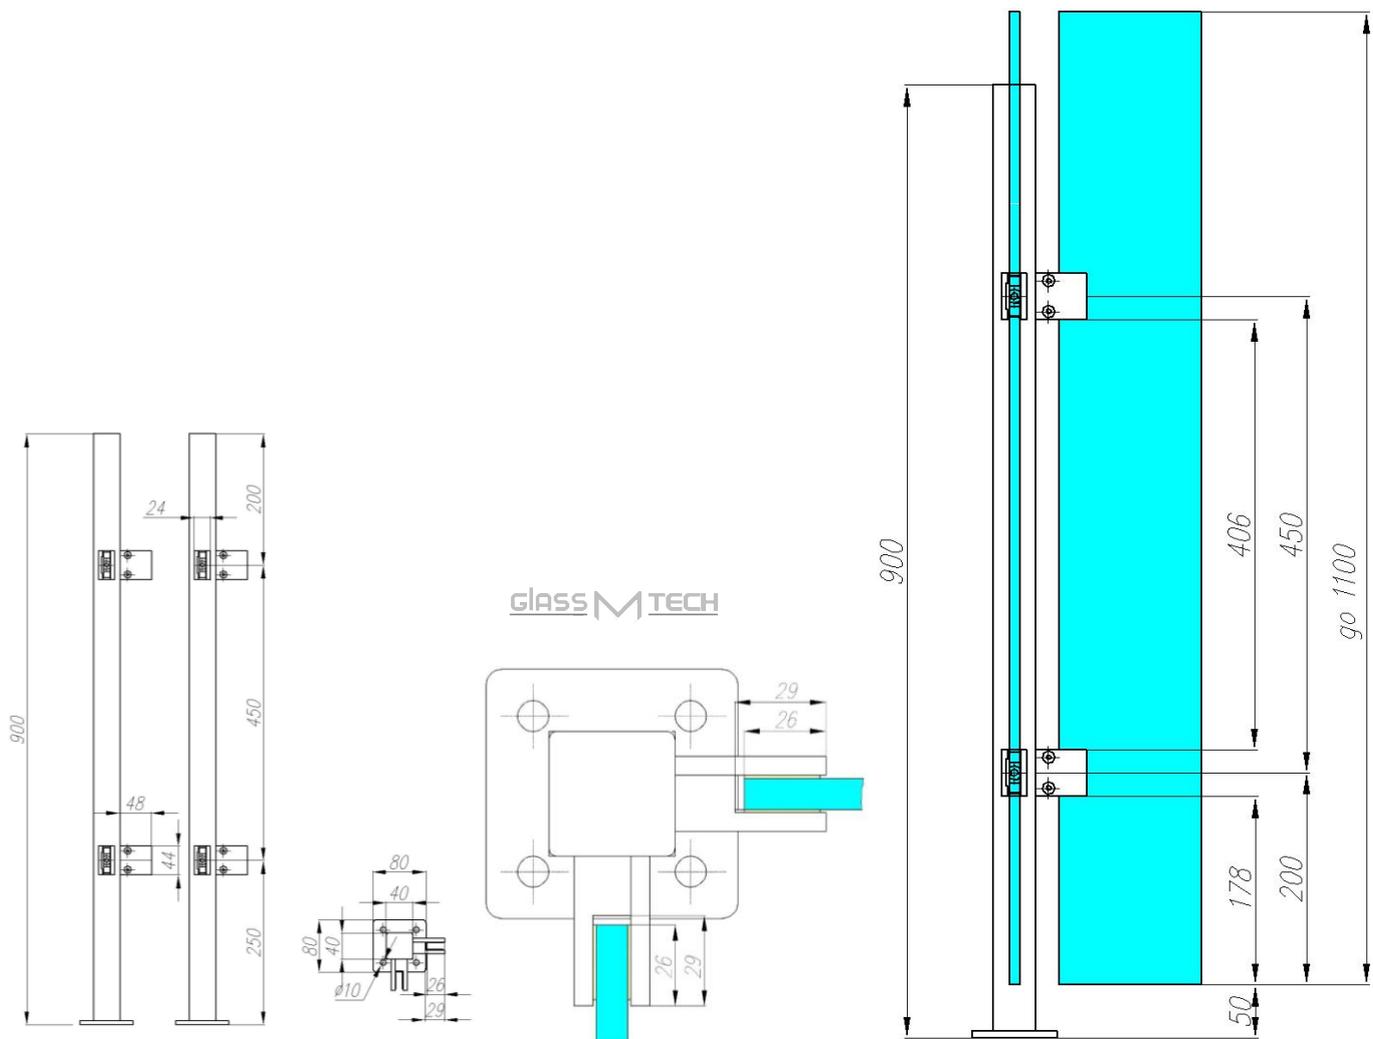


G900-09

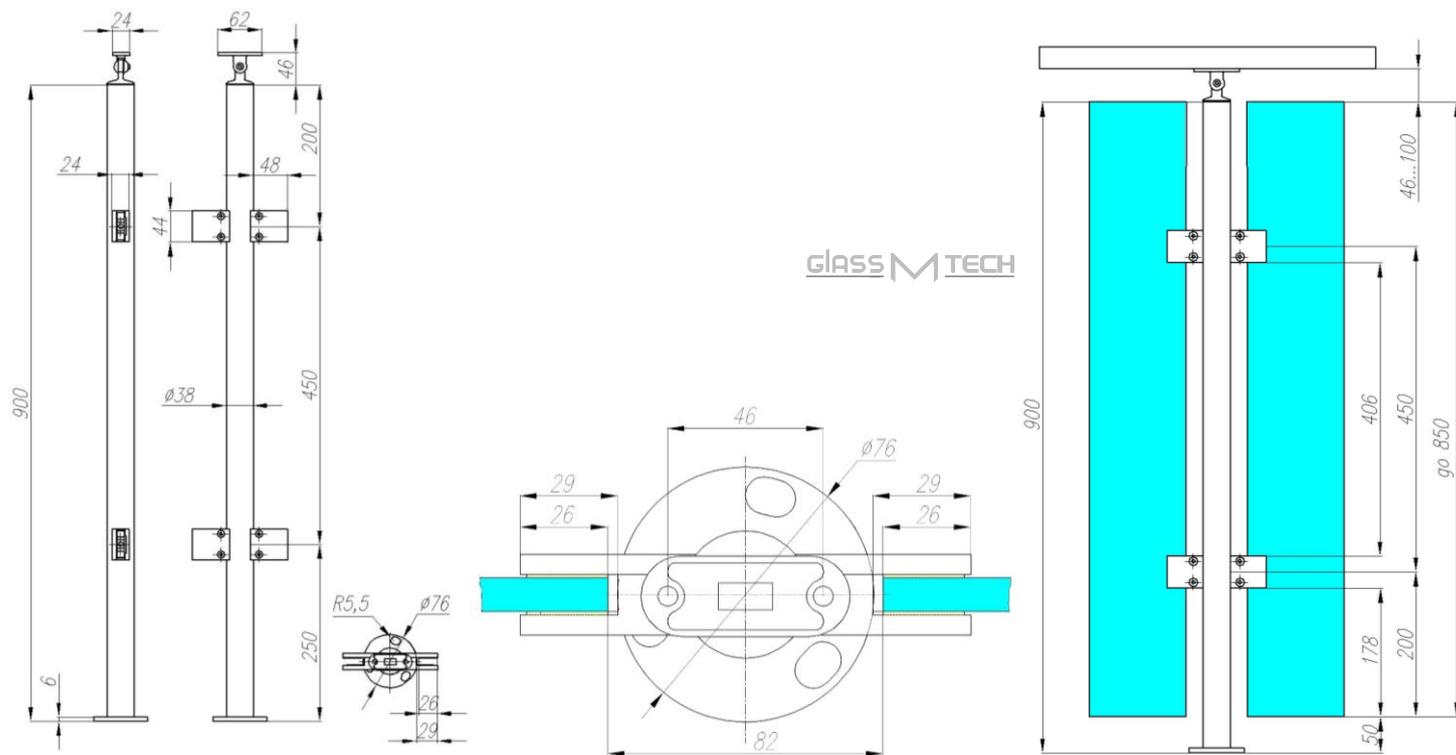


G900-10

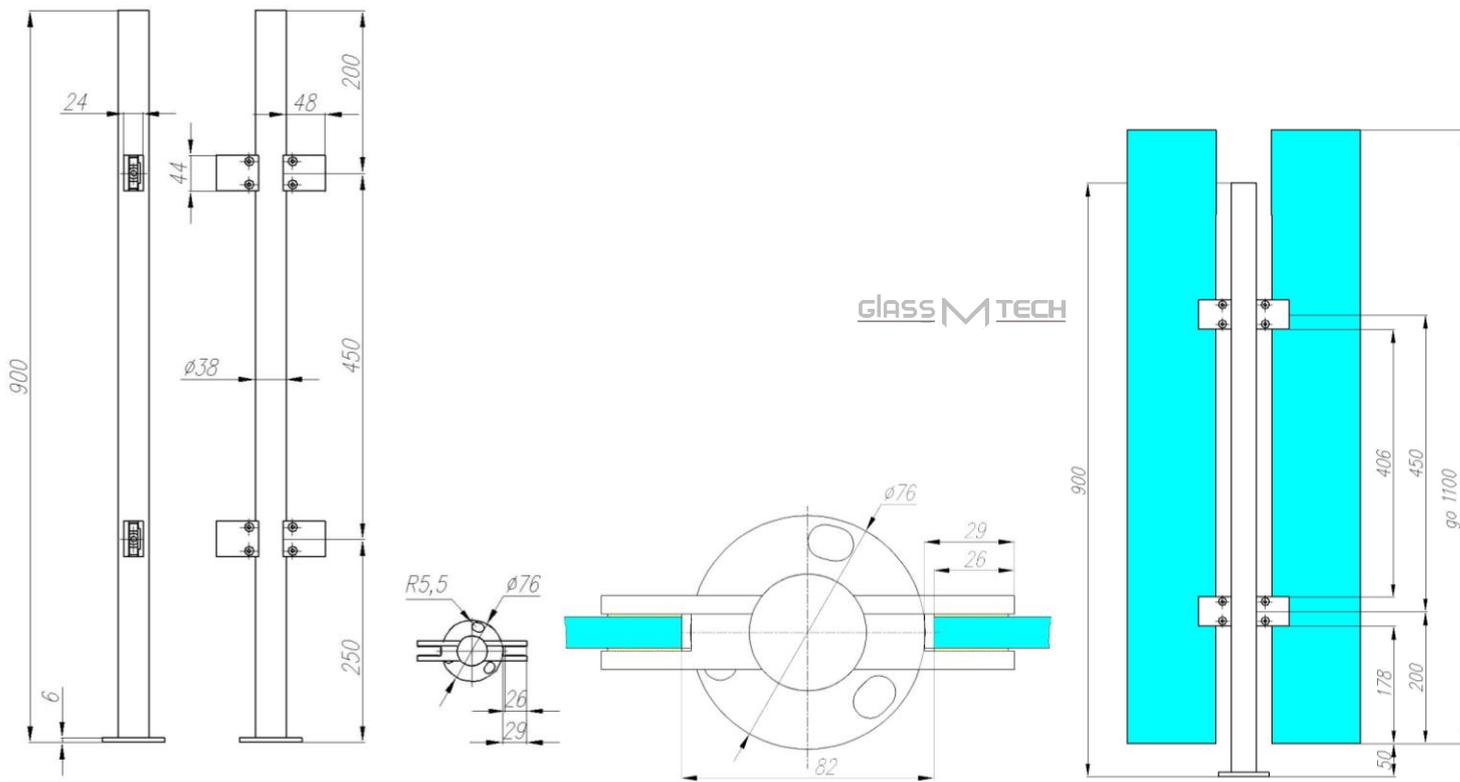


G900-11

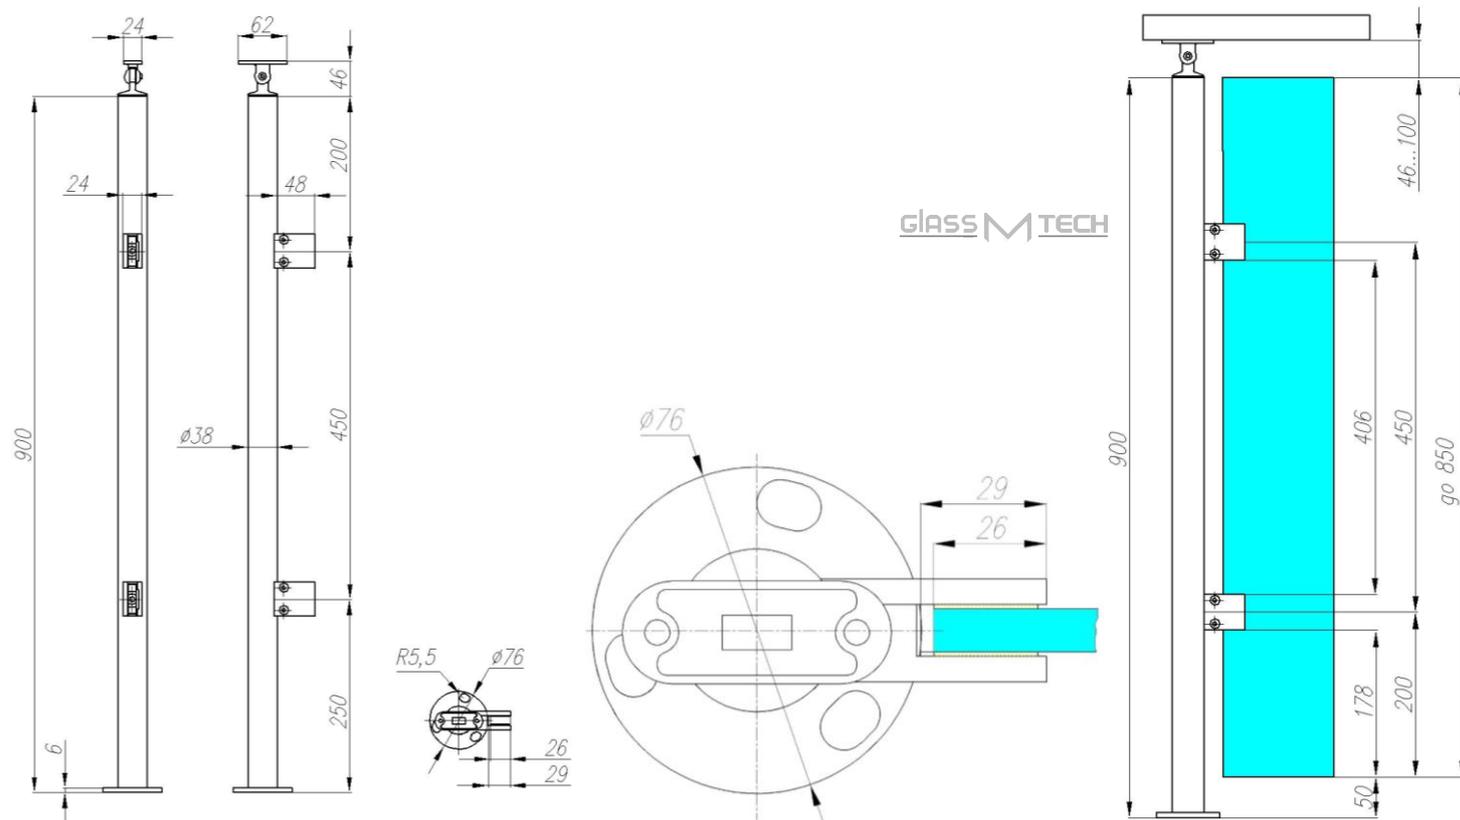

G900-12

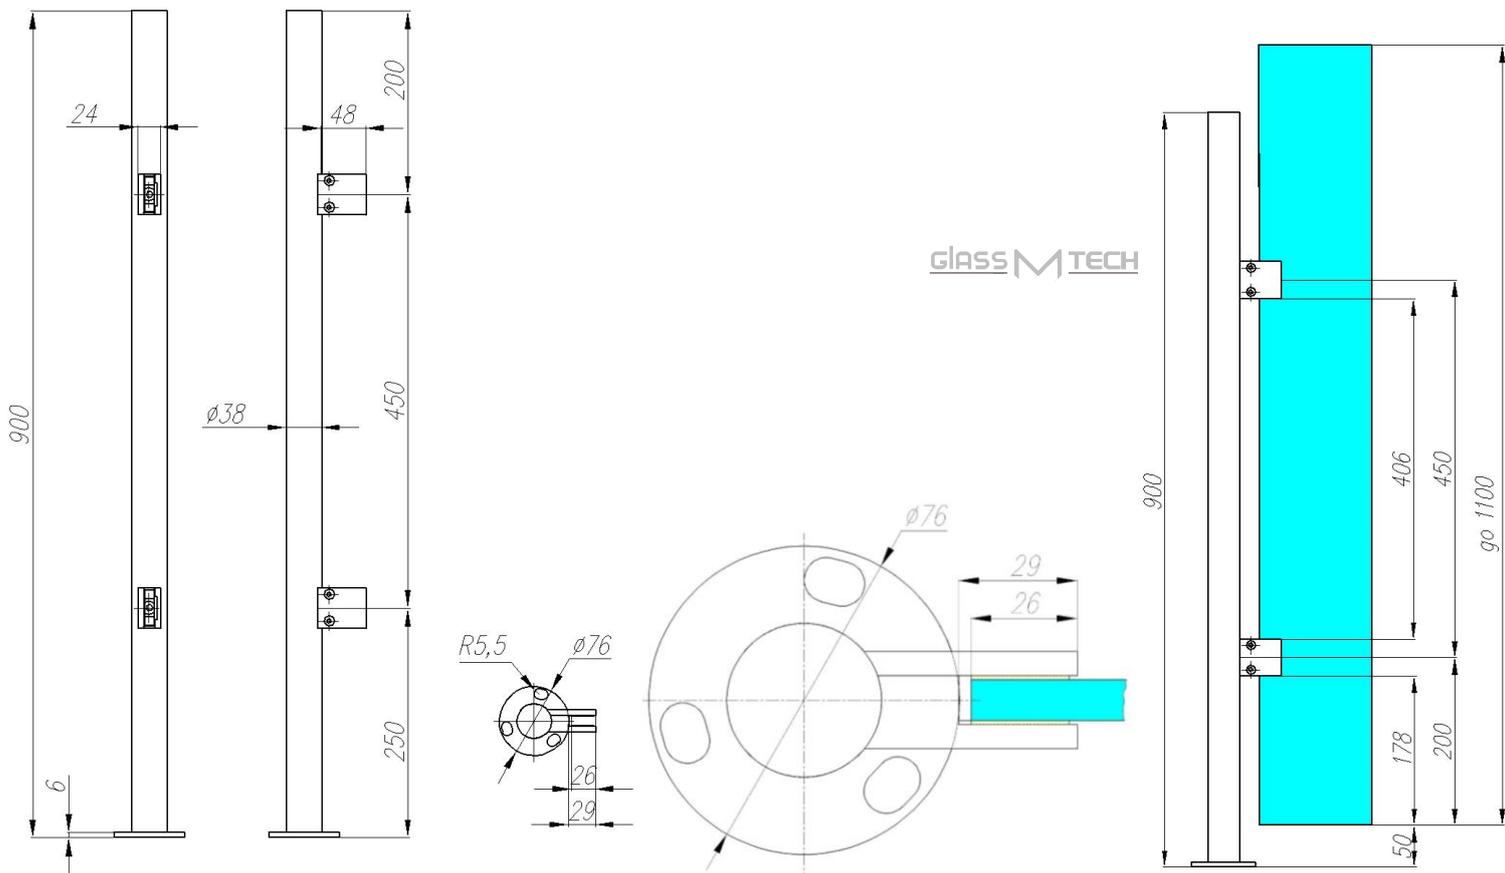

G900-13

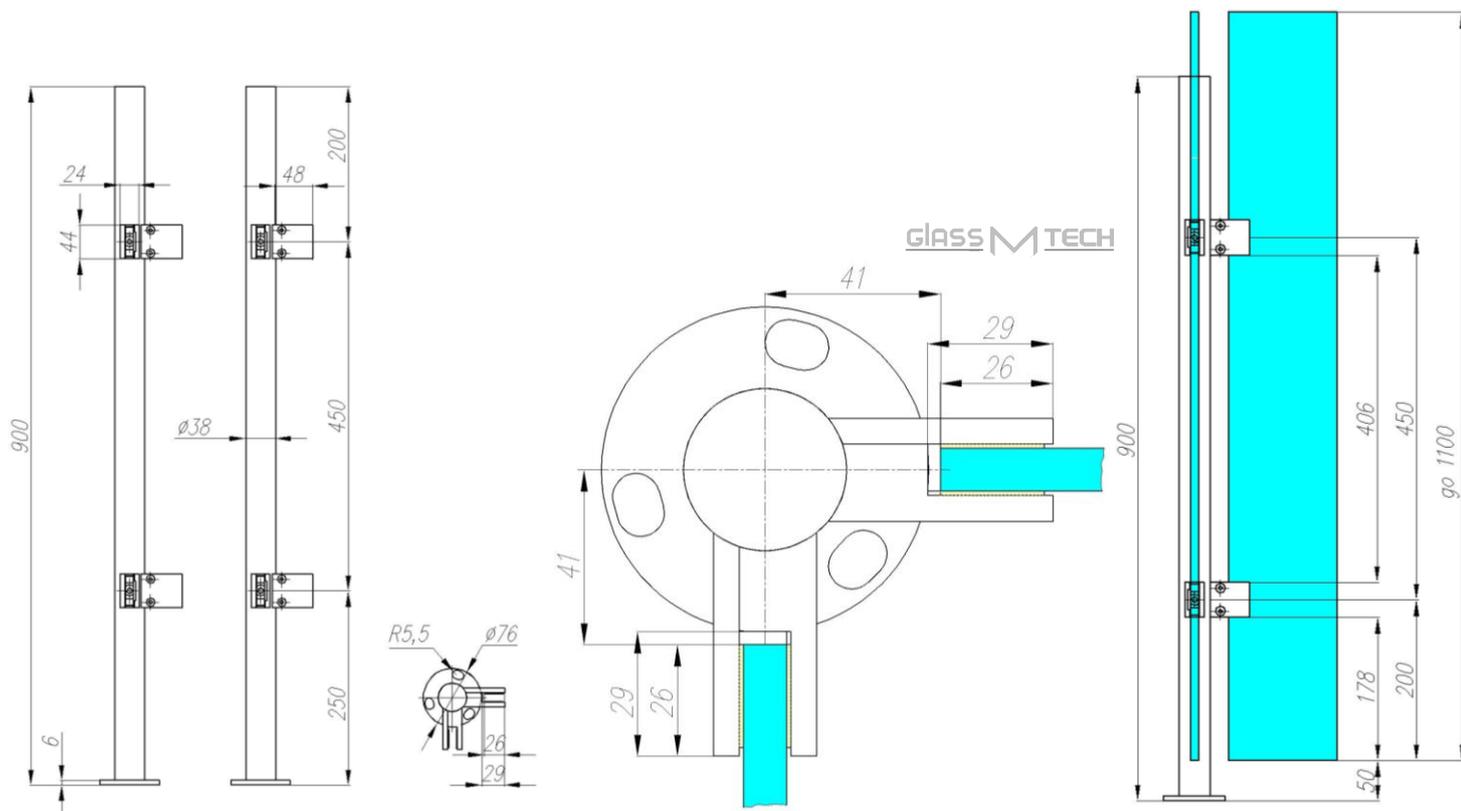

G900-14

